

Arming

Away Mode used when everyone is leaving the house. Arms perimeter and interior devices

- Enter 4 digit code and exit house or
- Press the "Away" button

Stay Mode used when someone is staying in the house. Arms perimeter but not interior devices

- Enter 4 digit code and remain in the house or
- Press the "Stay" button

Disarming

Enter the 4 digit code when entering the house or if the system is in alarm.
Press # if the code is miskeyed.

Panic Buttons

Hold the panic button down 3 to 5 seconds to activate.

Changing Master Code

Press * + 5 + current code + 40 + new code + #

User Codes

Adding user code

- Press * + 5 + master code + two digit user number (01-32) + new code + #

Deleting user code

- Press * + 5 + master code + two digit user number (01-32) + * + #

Bypassing Zones

When arming, arms everything but zone(s) bypassed.

The bypass or system light will stay on

- Press * + 1 + two digit zone to bypass + #

Chime Mode

Press * + 4 or "Chime" button to activate / deactivate.

Duress Code

Disarms the system but also sends a silent signal to central station.